

eW Cove Powercore Leader Cable Strain Relief Set-up Guide

All leader cables for eW™ Cove Powercore fixtures installed in North America must, in order to comply with Underwriters Laboratories rules for installation, have a strain relief on the leader cable where it emerges from the junction box.

The strain relief is included in the leader cable kit for 120 VAC installations in North America.


10 ft Leader Cable with Strain Relief – Item #: 108-000032-00 / Philips 12NC: 910503700586

To install the strain relief:

1. Remove a knockout from the junction box.



2. Slide the strain relief at least six inches in from the lead end of the leader cable.

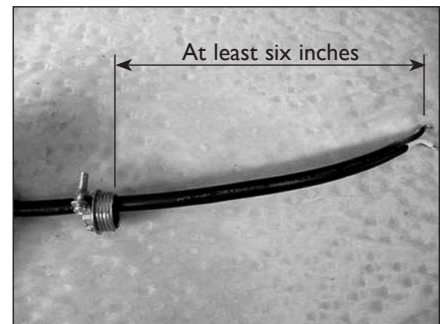

Tighten the two bolts on the strain relief clamp to lock it in place.

3. Thread the cable through the knockout and slide the strain relief nut down the cable.



4. Tighten the nut to lock the strain relief in place. When properly installed, the strain relief should look like this:

